

Vitalgas



Autogas

LPG GAS FILLING INSTRUCTIONS

STAY AT VEHICLE FILL POINT DURING FILLING PROCESS. ALSO DON'T OVERLY STRAIN THE HOSE.




Check vehicle fill point

- Must be clean
- Rubber seal must be in place



Connect nozzle

- Align connector to avoid cross threading
- Turn connector clockwise until tight

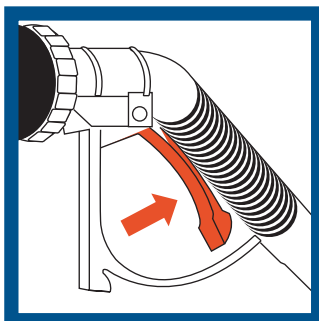


Squeeze trigger fully and hold

If leak occurs

- Release trigger
- Seek assistance immediately

WARNING! DO NOT JAM TRIGGER OPEN WITH OBJECT

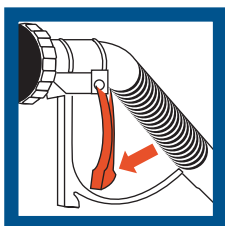

When filled release trigger

- Expect small discharge of LPG

WARNING! PLEASE RELEASE THE LEVER LATCH, IF FITTED, BEFORE DISCONNECTING THE NOZZLE



Disconnect nozzle and replace

LPG GAS WARNING

**HIGHLY FLAMMABLE
LIQUID UNDER PRESSURE**



Stop engine



**No flames or
pilot lights**



No smoking



**Avoid contact-
LPG may cause
cold burns**



**Do not fill cylinders.
For vehicles only**

**Do not overfill
80% maximum**